Broken line **Broken line Broken line Broken line**

 
Specifications Product Diagram Features Dear customer HDMI version.. 1. Supports 4 HDMI input port. ..HDMI 1.4 Thank you for purchasing this product. For optimum performance and safety, ...720p/1080i/1080p/4K HDMI input resolution. 2. Supports 1 HDMI output port. please read this instruction carefully before connecting, operating or adjusting 3. Compliant with HDMI 1.4. HDMI output resolution.. .1080P/2K/4K@30Hz this product. Please keep this manual for future reference. 4. Supports multiplexed HDMI 4-input and 1-output. Supports video color format. .deep color 24bit/30bit/36bit 5. Supports up to 4K@30Hz High Definition resolution. Vertical Frequency Range. ..1080P/2K/4K@30Hz This product is a high performance 4 by 1 Quad Multi-Viewer with seamless 6. Supports 4by1 Quad Multi-viewer and seamless switch. Max bandwidth.. ...225MHz switch. It supports four High definition input sources display on one screen, 1. Power on/of 7. Supports 1080P/2K/4K@30Hz output resolution. Max bandrate..6.7Gbps and have three multi-view effect mode. As a switcher, it can also seamlessly 2. IR Receiver **User Manual** ≤15m AWG24 HDMI standard cable 8. Supports audio switch. 4K Input cable distance.. switch the four HD inputs freely. The product can be controlled by the front 9. Supports fast switching. 4K Output cable distance... .≤10m AWG24 HDMI standard cable button or IR controller. 10. Supports Equalizer TMDS Output: 25MHz-225MHz TMDS clock. Max working current.. HDMI 4x1 Quad Multi-viewer Packaging content 11. Supports Blue-Ray 24/50/60fps/HD-DVD/xvYCC. Operating Temperaturer. (−15 to +55°C) with Seamless Switcher 12. Inputs can be switched with the IR remote controller, also can be controlled Operating Humidity range... ...5 to 90%RH (No Condensation) 1. HDMI 4x1 Quad Multi-viewer Front Dimension (LxWxH)... ...250x120x27mm by built-in button. with Seamless Switcher 13. Extend the transmission distance and improve transmission signal. Weight. 2. Remote controller 14. Compatible with DVI through a HDMI to DVI adapter. 3. User Manual 15. Supports hot plug-and-play. 4. DC 12V Power Adapter 16. LED indicate signal and power mode 17. No loss of quality. 18. Installs in minutes HDMI FULL **HD** 5. $\ \square$: Cycle Switching single screen display by order HDMI 1 to HDMI 4. IR Remote Operating Instruction **Example Connection Diagram Safety Precautions** • Do not expose this product to water source or an environment that has excessive moisture IN 2 • Do not operate the product when hands are wet. • Place this product on a flat surface and keep it out of reach of children. • Please turn the power off when it is not in use for an extended period of

Back

Switch mode Description

- 1. (b) : Power on/off.
- 2. 1-4: Switching the corresponding input HDMI 1 to HDMI 4.
- 3. Sound: Cycle switching audio output from input 1-input 2- input 3-input 4
- 4. 1080P/2K/4K: Switching the output resolutions between 1080P-2K-4K.


6. 📋 : switching and display on screen in following mode




7. 🛨 : Switching and display in following mode



Note: If you encounter picture cutting problem, please set your TV or monitor in point to point display mode

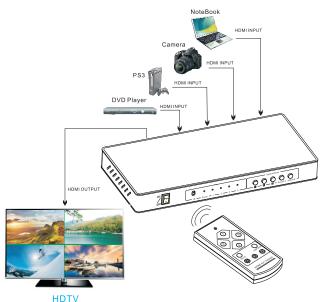

 - Do not attempt to dismantle the product on your own.
- Please use the power adapter provided.



- 3. Power LED indicator
- 4. HDMI Input LED indicator 1~4 5. Video mode switch button
- 6. Sound switch button
- 7. 1080P/2K/4K switch button



- 8. HDMI Input1~4 Port
- 9. HDMI Output Port
- 10. Power Input Port

Troubleshooting guide

Before power on, please check the connection line carefully. And make sure that all interfaces are correctly connected.

The common trouble shooting way shows below

Trouble Description	Cause and Ways to deal with
No Picture	Make sure that the TV is on and has been connected with the switcher. Check if the signal sources are on and well connected. Check the system connection quality. Check the cable quality
Obscure Picture	Try again to connect the cable to be free from the unsuccessful connection. Check HDMI Cable Quality
Remote not working	Check if the film in rear of the remote control is taken out. Check if the battery in remote is full.

Recycling the Product

To dispose this product properly, please follow the recycling process regulations in your area.

Broken line

Broken line

Broken line

Broken line

注:

- 1. 采用100g双面铜版纸进行2面印制
- 2.单色印刷
- 3. 在对折线处进行对折,正面朝外